

To start any adquio and connect to it, we have two options, do it by cable or by wifi:


Wifi connection:




Step 1: Make sure we don't have the WAN socket connected




Step 2: Connect the adquio power, and wait a few seconds.

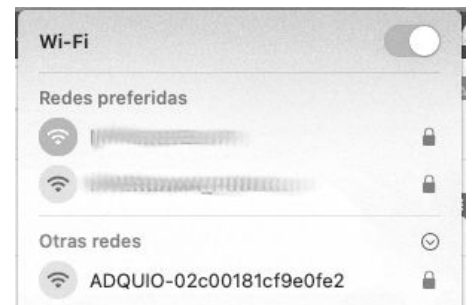

Step 3: On a laptop or tablet, in the list of available wifis, we will see one with the name ADQUIO-XXXXXX.

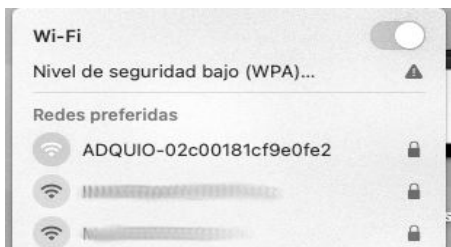

Step 4: We connect to that wifi with the password. You can find it on the adquio box.

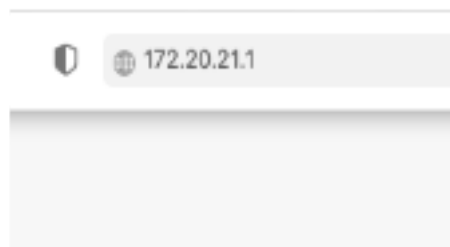


Step 5: Once connected, open a browser and go to the address: <http://172.20.21.1>



Step 6: You will see the adquio user input screen



Step 7: Use the user and password. You can find it in the documentation.

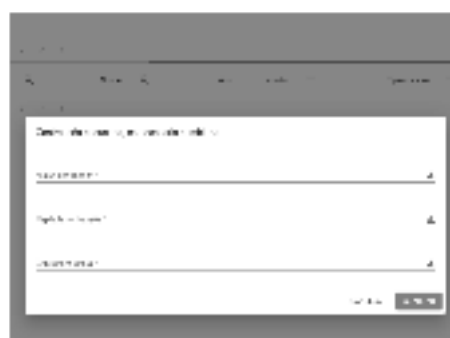

Step 8: It will ask you to change the password, we strongly urge you to do so.




Step 9: You can now enjoy all its features!

Note: Wi-Fi will remain active as long as you don't get an internet connection. Once obtained, you must enter the device through the adquio cloud.


Wired connection:




Step 1: Connect the adquio power, and wait a few seconds. Connect network cable to one of the LAN ports.

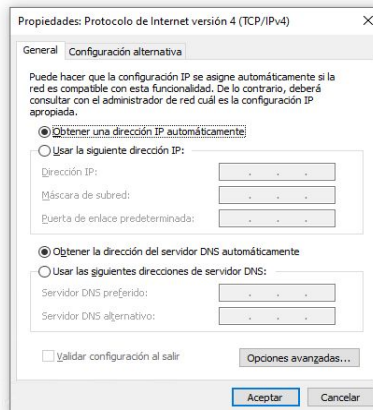

Step 2: With a laptop, make sure your network settings are set to automatic.

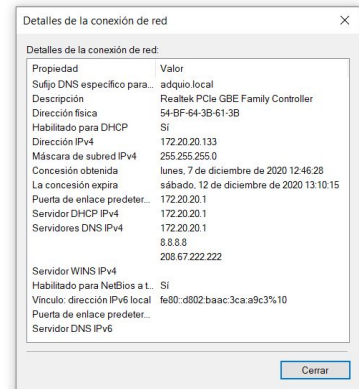

Step 3: Wait for the computer to obtain an IP address.

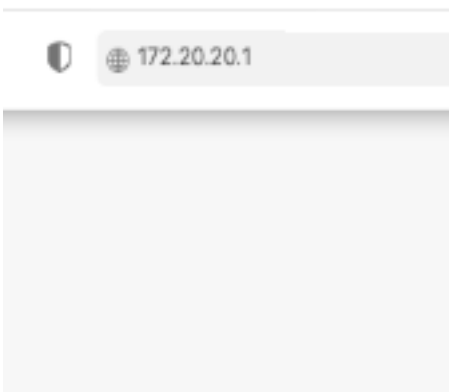

Step 4: Once connected, we open a browser and go to the address: <http://172.20.20.1>



Step 5: You will see the adquio user identification screen



Step 6: Use the **admin** user and the password. You can find it in the adquio box documentation.



Step 7: It will ask you to change the password, we strongly urge you to do so



Step 8: You are now in the adquio interface, you can now enjoy all its functionalities!